DDNS サーバーアドレスの追加作成手順



サービス提供者:No-ip.com を選択 ユーザーネーム:No-ip で登録したメールアドレス パスワード:No-ip で設定したパスワード ホスト名:新しく作成したDDNS サーバーアドレス アカウントにログインしたらメニューから Dynamic DNS を選択して、左画像のページへ進み、Create Hostname を選択します。

こちら(https://my.noip.com/#!/dynamic-dns)から直 接左画像のページに進むこともできます。

フォームに必要事項を入力します。

Hostnema, Domein, Record Type, IPv4 Address を入 力・設定して Create Hostname を選択したらアカウン トが作成されます。

グローバル IP アドレスの初期値は No-ip にアクセスし ているネットワークのものが自動で入るので、作成す る DDNS サーバーアドレスを利用するネットワークから アクセスしているのであれば書き換える必要はありませ ん。

IP カメラの設定はホスト名を書き換えて、設定してください。

同じ No-ip のアカウントで作成した DDNS サーバーア ドレスなので、サービス提供者・ユーザーネーム・パ スワードは変わりません。

(参考)スマホ版の DDNS サーバーアドレス取得画面

. Our			
Hostnames		Hostname o	
		(9)(in)	
		Domain o	
1 of 3 Hostname Count		onune	4
Purchase More Hostnames		Record Type	
		A DRU HUNDRE IS	
		C AAAA DAVID (B	
Free Hostnames expire every 3	5	C ONS ABLE SCHAMED (F)	
days. Enhanced Hostnames ner	ver	O Well Andred D	
expire.		Desage your Bound Autory, TxT, SRY and DKM resources.	
Upgrade to Enhanced		IPv4 Address o	
		 In C ≡ 	
		Wildcard =	
Create Hostname		Hypersele to initialized the analysis address	
Search	× Q	2.0230.023	
		MX Records	
		· Add MR Party fr	